

SAT BRANDS	SAT CODE
AIWA	404
ALBA	333-334-335-338
ALDES	365
ALLSAT	315-377
ALLSONIC	365
AMSTRAD	343-361-369-371-411
ANKARO	339-365
ARCON	361-382
ASIASAT	410-442
ASHIN	361
AST	341-353-493
ASTERLINK	413
ASTON	377-561
ASTRA	353-384
ASTRO	322-376
ATALANTA	407
ATLANTA	394-426
BAFF	415
BARCOM	339
BEKO	474-488
BENJAMIN	405-441-444-539-542
BEON	431
BESAT	541
BEST	322-339
BLAUPUNKT	319-322
BRAIN WAVE	374
BRUNOR	337
BRUNS	365
BUSH(RBM)	333-338
CALIBER	416-454-523-527
CAMBRIDGE	366-367
CANAL +	398
CHANNEL MASTER	334
CHAPARRAL	373
CHEROKEE	368
CITY COM	364-379
COLUMBUS	368
CONNEXION CX	340-358-359-390
CYFRA PLUS	398
DAYTEK	418-424
DDC	334
DIGITURK	605
DISISTRAD	315
DISK EXPR.	333-339
DNT	318
DONATEC	339-372
DRAKE	372
DUMONT	323-326
DYNASAT	364
ECHOSTAR	355-368-380-381-390-432-446-556
ELTA SAT	377
EMME ESSE	364-365-382-556
EROSAT	421
EURIEULT	385-386
EUROGRAFF	521

SAT BRANDS	SAT CODE
EUROSAT	377-421
EXPER	419
FAIT	364-390
FIDELITY	371
FILMNET	315
FINLUX	323-324-326-350
FM	377
FOBEM	408-525
FRACARRO	345-347-364
FTE	370-382-388
FUBA	322-339-343-355-368-386-390-391
G SAT	331-354
GALAXIS	365-377-398
GAMMA	538
GEIMA	444
GMI	407-426
GOLD	525
GOLDBOX	398
GOLDEN CABLE	387-394
GOLDMASTER	607
GOLDSTAR/IG	322-363
GROTHUSEN	363
GRUNDIG	319-320-322-606
HAUPPAUGEI	610
HELIOCOM	347
HINARI	331-334
HIRSCHMANN	322-324-362
HITACHI	350
HUTH	365
HUMAX	575-612
HWA LIN	422
HYPSON	385-386
HYUNDAI	609
ICX	300-395
IMPERIAL	333-338
INTERMIL	445
INTERSAT	459-520
ITALTEL	556
ITT-NOKIA	317-324-350-352-353-355-356-398
SHAUBLORENZ	491-579
JEEMON	377
JERROLD	300-395
JOHANSSON	374-383
JSR	377
KATHREIN	322-364-375-376-384
KENNEK	398
KENWOOD	398
KOSMOS	363-375
KOTA	317
KREIßMEYER	322
KYOTO	407-410-412-480
LASAT	412-423-451
LEGEND	398-556
LENCO	363
LENG	374

SAT BRANDS	SAT CODE
LORENZEN INC.	423-450-451-452-453-454-455-456 457-458
LUXOR	323-328-350-351-353-354-355-356
M ELECTRONIC	323-326
MAGNUM	415-447-448
MANHATTAN	377-425-447-448-449
MARANTZ	315
MASPRO	384-389
MATAV	375-387-394
MEDIABOX	398
MEDIAASAT	398
MEGA	315-482
MEMPHIS	346-373
METRONIC	324-373
METZ	319-320-322
MINISAT 1	540
MITSUBISHI	319-322
M-NET	339-489
MORGANS	361
MULTI CHOICE (SUNMOON)	440-470
MULTISTAR	375
MURATO	363
NEC	357-360
NETA	400-401-435-437
NETWORK	331
NEWYORK	419
NEXT	395-420-518-519-521
NEXTSTAR	611
NEXTWAVE	395-517-538
NOKIA > ITT-NOKIA	
NOVA (YENICAG)	436
OKANO	375
OLYMPIC	365
OPTEX	374-377-379-386
ORAVA/OTF	315
ORBIT	342
ORIGO	338
OXFORD	367
PACE	329-330-331-332-398-438-440-469
PALCOM	368
PALSAT	370
PANASAT	468
PANASONIC	613
PHILIPS	315-316-317-362
PILOT	377-427-460
PIONEER	317-398
PLANET	338-522-528
PMB	431
PREMIER	409-415
PROSAT	334-335-336
QUADRAL	334
RADIONETTE	326
RADIX	390-457
RC	395

SAT BRANDS	SAT CODE
RC 2	303
REDIFFUSION	360
RITAR	353
ROADMASTER	431-454-529
ROADSTAR	398
ROCH	385-386
SABA	333
SAGEM	433
SAKURA	346
SALORA	344-350-353-354-355
SALORA	434
SAMSUNG	341-361-362-375-576
SANGEAN	414
SAT	321-341
SAT PARTNER	363
SATEC	331
SATECO	377
SATELLITE	348-426
SCHNEIDER FR.(PHILIPS)	364
SCHWAIGER	331
SEEMAN	390
SEG	565-566-567
SERVISAT	431-565-566-567
SET	428-439-483-484-485
SIEMENS	319-320-322
SILVA	363
SIMKO	429
SKYLAB	339
SKYMASTER	365
SONY	317-398
STAR DJITAL	433
STELLA	359
STREAM	556-581
STRONG	370-394-398-425-447-448-578
STVI	386
SUNNY	454-487-522-524-529
SUPEX	408
TAGRA	355
TAKWANG	443
TANDBERG	315
TANTEC	368
TECHNISAT	348-349-362-378-390
TECHNOMATE	608
TECHNOSAT	377
TELE+	398
TELECOM	359-377
TELEMASTER	447-448
TELESERVICE	296-312-319
TELESYSTEM	364
TELEWIRE	569
TELKOM	530-565-566-567
TEMPO	408-430-431-525-526
TENSAI	326
TERMAL	402-419-426-431-432-486
TEVEL	585

TV BRANDS	TV CODE	BRAND CODE
TECHNICS	176-498	021
TECHNISAT	102-533	023
TECHNOL	101-155-167-169-187	018
TEDELEX	102-105-155-167-230	019
TEINEL	102-221-230	028
TEKNANT	102-167	034
TELE+	102-167	034
TELEAVIA > THOMSON		
TELECHROM	177-465	026
TELEFAC	167	030
TELEFUNKEN	102-148-149-154-167-168 169-172-191-192-193-195 196-200-201-230-476-490 500-533-557-559	007
TELEOPTA	167	030
TELEPOINT	102	035
TELESTAR	102-167-187	034
TELETECH	102-149	035
TELEVISION(FORMENTI)	105-121-155-221-234-235	013
TELEKOM	102-230	035
TELRA	102-200-230	024
TEMPEST	155-167-177	018
TENSAI	102-105-114-132-149-155 164-167-169-177-205-210 211-213-230-234-532-568	018
TESLA	156	027
TESLA SLOV	102-133-184-230	011
TETRA	230-234	037
THOMSON	102-421-128-133-146-147 174-184-190-191-192-197 200-201-221-230-504-508 512-543-557	007
THORN FERGUSON	101-102-103-105-110-111 112-114-127-128-131-132 148-154-155-156-158-159 161-163-186-187-189-191 192-198-200-204-208-209 212-220-221-223-224-227 228-233-235-236-237-239 246-248-396-495-496-500 511-515-548-551-557-601	000
TOBISHI	155-167-177-187	025
TOBO	167	030
TOKAI	102-167-187	034
TOKYO	465	026
TOMITA	155	030
TOPVISION	102-221-230-403	020
TOSHIBA	101-155-161-237-238-239 247-249	032
TRANSCONTINENTS	102-154-218	038
TRANSONIC	102-105-187-207	014
TREVI	167-177-465	026
TRIAD	102-105-156	018
TRIDENT	102	035
TRILUX	102-403	024
TRISTAR	186	039

TV BRANDS	TV CODE	BRAND CODE
TRIUMPH	125-497	029
TRIVISION	167	030
TTR	101-568	016
TV STAR	221	016
TVD	544-568	024
UHER	107-129-221-234-544-617	033
ULTRAVISION	146-156	037
ULTRAVOX	101-102-105-110-133-149 155-205-210-218-235-249 535	013
UNIC RADIO	106-154-155-227-230	020
UNIVERSUM	101-102-105-110-111-112 114-116-121-123-124-125 128-131-132-151-155-158 160-161-163-164-167-171 172-173-187-220-223-224 227-230-231-553-559	001
UNIVOX	105-133-149-156-220-230	014
URANYA (FORMENTI)	102-121-154-167-169-205 210-234	020
UNK	102	035
UTAX	155-167	030
VANGUARD	155-167-222	019
VECO	105-167	019
VESTEL	102-103-115-127-149-165 186-222-229-230-532-568 615	035
VEXA	102-103-155-167-177-222 465	008
VICEROY	155-164-187	018
VIDEOCON	105	030
VIDEOLOGIC	155-177	037
VIDEOMAC	155-187	034
VIDEOTON	102-151-154-155-207-217 221-222-229-230-507	028
VIDIKRON	234	038
VIDION	167	030
VISION 2000	102-167	034
VISIOREX	154	030
VISTAR	224-231	002
VOXSON	121-133-205-210-218 108	013
WALKIE	108	019
WALTHAM	149-221	019
WATSON	102-105-171-187-218-234 235-497-532-568	013
WATT RADIO	155-156-205-207-210-213 220-223-235	004
WEGA COLOR	161	031
WEGA VISION	161	031
WEGA VOX	102-149-167-207-229-532 568	042
WELTBlick	102-234	038
WESTON	230	035
WHITE WESTING. (FORMENTI)	101-102-107-115-125-127 155-167-202-205-207-230 234-544	013
WINNERSAT	167-465	040

TV BRANDS	TV CODE	BRAND CODE
WINSTON	102-167-465	040
WORLD TECH	102	035
YOKO	102-155-167-187-191-221	025
YORK	177	037

VCR BRANDS	VCR CODE
ACCENT	261-283
ADMIRAL	278
AGASHI	283
AIOSTAY	261
AIWA	261-263-280
AKAI	265-285-287-279-290
AMSTRAD	261
AKIBA	283
ANGLO	261
ANITEC	252-283
APHEL SOUND	261
ASA	252-261-289
ASTRA	261
ASUKA	283-289
ATLANTIC (WVESTING)	278-289
AUDIO DYN.	276
AUDIOSONIC	283-289
AUTHENTIC	290
AUTOVOX	252-289
AWA	265
AWATRON	261
BAIRD	279-290
BANG & OLUF	252-290
BAUER-BOSCH	252-253-254-255
BEAULIEU	252
BLAUPUNKT	253-255-260
BONDSTEC	283
BRANDT > THOMSON	
BRAUN	260
BRIONVEGA	272-278-290
BRUNS	283
BUSH (RBM)	283
CANON	255-260
CASIO	261-285
CGE	261-278-290
CGM	278
CIE	284
CIMILINE	283
CITIZEN	289
CONDOR(WVESTING.)	278
CONTIN. EDISON	272-290
CORVUS	261

VCR BRANDS	VCR CODE
CROWN	261-283
DAEWOO	251
DANSAI	283
DE GRAAF	252-261-278
DECCA (TATUNG)	252-261-290
DEMA COLOR	278
DOMOH	289
DUAL-TEC	252-261-290
DUMONT	252-261-278
DYNATECH	261
EDAN LINE	278
EDISON	283
ELBE	261-276-278-289
ELIN	282
ELTA	261-283
EMERSON	261-278-289
ESSELTE	261-283
EUMIG	278
EXCEL	278
FAIR VIDEO	289
FENNER	283
FIDELITY	261-275-283
FINLANDIA	252-278
FINLUX	252-260-261-271-278-283 289
FIRST LINE	261-283-289
FISHER	278
FORMENTI	252-272-278-289
FUJITSU	261
FUNAI	261-283
GBC	283
GE	290
GEC	252-283
GELESO	271-283
GENERAL TECHNIC	255-261-283
GOLDHAND	283
GOLDMEDAL	261-283
GOLDSTAR/LG	261-276-289
GOODMANS	261-283
GR 15	283
GRAETZ > IIT	
GRANADA	252-260-262-278-290

TV BRANDS	TV CODE	BRAND CODE
YUMATU	102-167-187-207	025
ZAMPA	219	016
ZANUSSI > SELECO		
ZIRWATEL	167-557	007
ZOPPAS > SELECO		

SAT BRANDS	SAT CODE
THOMSON	330-331
THORN FERGUSON	315-316-319-320-323-326-329-330-331
THUNDERMAX	300-315-390
TOCHIBO	415-521
TOKAI	402-417
TOSHIBA	415-440
TPS	433
TRIAD	341-363
TRIAX	325-348
TRISTAR	370
TWINNER	431
ULTRAVOX	377
UNIDEN	392-393
UNITOR	339
UNIVERSUM	319-322-323-326-327-350
V TECHNOLOGY	363

SAT BRANDS	SAT CODE
VENTANA	315-318
VESTEL	530
VISIOSAT	374
VORTEC	361-362-406
WINERSAT	374
WISI	322-341-342-355-390
WORLD SAT	492
XCOM	492
XSAT	492
YENICAG	436-479
YES	584
YONSAT	522
YUMATU	375-387-394-419-450-454
ZAHAV	586
ZEHNDER	341-375
ZODIAC	577-580-582-583

DVD BRANDS	DVD CODE
AFREEV	623
AIWA	652
AUDIOSONIC	624
CYBER HOME	623
DAEWOO	657
DENON	657-658
ELTAX	603
GOLDSTAR/IG	646-647
GOODMANS	653
GRUNDIG	654
HARMON KARDON	625
HITACHI	626-651-660
HITEMER	627-628
IRRADIO	629-648-653
ITT/NOKIA	653-654
JVC	650
KENWOOD	630-644-658
LENCO	631
LOEWE OPTA	654
LUXMAN	651
MARANTZ	654-655
NAD	632
NAKAMICHI	635

DVD BRANDS	DVD CODE
ONKYO	634
PANASONIC	658
PHILIPS	654-655-656
PIONEER	645-660-661
RAITE	637
REVOX	654
REVOY	631
ROADSTAR	624-631-653-659
ROTEL	650
SABA	648
SAMSUNG	651
SEG	623-637
SHARP	643
SINUDYNE	630-658
SONY	662-663
TEAC	638-639-660
THOMSON	651
TOSHIBA	633
TREVI	624-648
UNK	640
VESTEL	653
YAIM NETSTATION	636-641-649
YAMAHA	642-654-658

09201004

TV BRANDS	TV CODE	BRAND CODE
A.R. SYSTEM	102-154-156	020
ACCENT	167-187	034
ACTION	167	030
ADMIRAL	133-167-218-232-233-245 247-558-571	016
AGASHI	105	030
AIKO	155-167-177	006
AIM	101-102-103-105-156-169 188-236	011
AIOSTAY	167-230	026
AIWA	504-600	007
AKAI	102-103-105-110-155-164 167-169-176-177-188-192 207-209-216-227-229-230 231-246-249-534-550-619	006
AKI	155	030
AKIRA	101-104	009
AKURA	101-102-167-177-187-227 229	008
ALBA	102-177-230-501	020
ALBIRAL	102-105-149-154-156-181 187-205-210-230	013
ALHORI	155	030
ALLOGRAN	155-220-223-544	002
AMPLIVISION	155-156	023
AMSTRAD	105-167-187-188-233-497 008	035
ANEX	102	035
ANGLO	187	034
ANITECH	102-105-127-167-205-210 234	013
ANSONIC	102	035
ANTECNO	177	037
ARC EN CIEL > THOMSON		
ARCELIK	102-115-191-200-230-239 242-403	024
ARDEM	403	024
ARISTONA > PHILIPS		
ART TECH	102-167-209	033
ASA	114-124-126-131-132-136 218-231	004
ASBERG	102-127-207	025
ASTHON	102	035
ASTON	473	022
ASTRA	102-105-156-164-167-230 465-477-594-596-599	040
ASTRO SOUND	102-156-205-210-230	018
ASUKA	177-230	037
ATAKI	465	026
ATLANTIC(WESTING.)	102-107-115-234-544	033
ATORO	167	030
AUDIOSONIC	102-105-115-149-154-155 167-169-177-187-205-215 221-403-551	025
AUDIOSTAR	177-465	026
AUDIOTON	155-167-177-234-465	020

TV BRANDS	TV CODE	BRAND CODE
AURORA	133-155-167-169	015
AUSIND	121	029
AUTOVOX	102-124-129-130-151-155 167-169-220-223-503-544 545-571	033
AUVISAT	572	040
AWA	102-105-155-161-167-169 209	006
BAIRD	209-236	009
BANG & OLUFSEN	105-133	029
BARCO	133-144-145-147-181-182 184-230-236	039
BASIC LINE	102-177-220-223-224-465 568	002
BAUR	101-102-104-105-110-111 112-158-159-167-220-222 223-227-246-617	005
BAZIN	138-155-221	028
BEKO	102-105-115-191-200-221 230-239-242-244-249 403-478	024
BEKO TEKNIK	106	024
BEON	207	028
BIFONIC	155-167	030
BIGSTON	167-169-187	015
BLAUPUNKT	110-111-112-113-117-119 154-161-171-173-176-464 498-551	021
BLAUSONIC	155	030
BLUESKY	102-568-572	040
BLUE STAR	230	035
BOSCH > BLAUPUNKT		
BRANDT > THOMSON		
BRENDSTAR	167	030
BRIONVEGA	102-103-133-135-136 144-152-153-202-232 233-503-509-618	034
BRITANNIA	102-155-228	017
BROTHER	187-477-587-598-602	041
BRUNS	133-203-205-210-227	029
BSR	221-226-497-501-546	010
BUSH	102-229-230-465	008
CAMPER	221	024
CAPSONIC	102-187	034
CASIO	102-103	035
CBM	127	035
CENTURY	133-149	029
CGE	102-115-127-143-149-167 172-177-207-221-229-230 234-247-559	014
CGM	102-106-115-167-187-403 465-532	025
CIE	167-169-177-546	026
CIHAN	102-105-221-230	008
CLARIVOX	105-128-133-149-154-156 203-214-215	029

TV BRANDS	TV CODE	BRAND CODE
CLATRONIC	490	024
COFADEL(THOMSON)	147-191-197-201	007
COMPUTRON	105-167-188-231-512	026
CONCORDE	167	030
CONDOR (W.WESTING.)	102-127-167-187-205-207 210-234	013
CONIC	164	019
CONRAD	568	040
CONTEC	155-157-161-167-187-546	015
CONTI	102-105	028
CONTIN.FR	102-512	021
CONTIN.EDISON (THOMSON)	137-146-147-174-191-192 197-200-201-543	007
COSMEL	167-215	025
COSMOS	102-167	034
CROSLEY (PHILCO)	116-127-133-143-149-172 235	014
CROWN	102-106-115-116-127-167 177-187-188-207-403-465 532	025
CRYSTAL	102	035
CS ELECTRONICS	177	037
CTC CLATRONIC	102-115-127-149-155-177 187-188-205-207-210-490	013
CURTIS	105	030
CYMATIC	154-155-221-230	028
D-VISION	102	035
DAEWOO	102-103-105-149-151 155-167-169-177-209 216-466-551-616	006
DANSAI	164-187	018
DAWA	102-105	028
DE GRAAF	222	035
DECCA(TATUNG)	104-105-154-155-160-204 209	030
DENVER	102-167	034
DESMET	102-154-167-230-234	013
DIAMOND(DAEWOO)	167-169	027
DIGILINE	102	035
DIXI	167	030
DOMEOS	102-620	035
DOMOH	102	035
DORIC	235-559	014
DUAL-TEC	101-102-105-108-114 149-155-167-220-223 227-229-230-233-497 551-573-617-620	008
DUAL > DUAL TEC		
DUMONT	102-114-125-127-131-132 133-171-205-207-210-235	004
DUX	102-105	028
DYNAMIC	167	030
DYNMISTY	102-169	033
ECHOSTAR	102	035
EDAN LINE	102-236	009
ELECTRO TECH	167	030

TV BRANDS	TV CODE	BRAND CODE
ELBE	109-154-155-156-161-197 202-230-232-233-245-247 555-563	023
ELEKTRONSKA	154-230	028
ELIN	102-114-155-167-227-231	001
ELITE	171-234-558	021
ELMAN	205-210-230-497	010
ELTA	180	032
EMERSON	102-105-106-115-125-127 131-133-149-155-187-188 205-210-230-234	013
ENGEL	203-230	028
ETRON	167-188-513	026
EUROCOM	230	035
EUROLINE	615	035
EUROMAN	105-116-155	001
EUROPHON	149-154-155-205-210-213 230	004
EXPERT	107-198-220	037
FAGOR	230-467	035
FALCON	167	030
FENNER	105-167-169	012
FIDELIS	105-155-164-167	012
FIDELITY	146-149-155-164-177-186 188-200-220-223-228-230 234-568	037
FILSAI	155-167	030
FINLANDIA	221-222	028
FINLUX	102-105-114-124-124-125 131-132-151-154-167-205 207-209-210-227-231-235 511-550-619	004
FIRST LINE	102-103-105-128-149-155 156-157-167-169-209-220 223-224-227-229-230-232 234-568	042
FISHER	106-114-133-155-157-161 162-163-166-203-220-223 235-236-246-617	015
FLINT	102-216-563	006
FORMENTI	102-105-115-121-127-133 154-155-167-171-187-205 207-210-221-230-234-235 497	013
FORTRESS	133	029
FRONTA	102	035
FRONTECH	102-149-151-155-164-167 222-230-497	019
FUJITEC	102	035
FUJITSU	102-108-132-155-164-177 205-210-226-233-544-545 226	016
FUNEO	226	019
FUNAI	161-167-187-546	015
GALACTEX	155-187	034
GALAXI	102-125	042
GALAXIS	102-115-125-207	013
GALERIA	167	030

2- **PRESS and HOLD** <CODE> button until the Led Indicator flashes and then release the button. Keep your remote control directed to your device, **PRESS** and **RELEASE** <CODE> button again to start **FULL AUTOSEARCH**.

3- When the device under test (i.e. Your TV) turns **OFF** press any button **IMMEDIATELY**. **TURN ON** your device and check all functions for correct operation. If all functions aren't correct, **PRESS** and **RELEASE** <CODE> button again to continue **SEARCH** operation. Repeat step (3) until you get correct functions on the remote.

4- If no button is pressed for 10 seconds, the selected code is memorised automatically.

AUTOSEARCH for TV BRAND

1- Select TV1 or TV2 device location by using "**DEVICE SELECT**" button.

2- Look up the **BRAND CODE** for your equipment in the TV Brands list at the end of User's Guide. (e.g. for Philips Brand Code = 011)

3- **PRESS and HOLD** <CODE> button until the Led Indicator flashes and then release the button. Keep your remote control directed to your TV and enter the three digit code of your Brand by using numeric keys. As soon as valid code is entered, **AUTOSEARCH** for TV BRAND operation starts.

4- When your TV turns **OFF** press any button **IMMEDIATELY**. **TURN ON** your TV and check all functions for correct operation. If all functions aren't correct, **PRESS** and **RELEASE** <CODE> button again to continue **SEARCH** operation. Repeat step (4) until you get correct functions on the remote.

5- If no button is pressed in 10 seconds, the selected code is memorised automatically.

* In the **SEARCH** mode, the Led Indicator keeps on flashing.

* After all available codes have been searched through, the Led Indicator flashes 2 times.

2 HOW TO IDENTIFY A CODE STORED IN A DEVICE LOCATION ?

It is possible to identify the code number that have been programmed into one of the five (3 for Multitel) device locations.

1- Press "**DEVICE SELECT**" button and select device with unknown code.

2- First press and **HOLD** "**SHIFT**" button then press "**CODE**" button once.

As soon as the "**CODE**" button is pressed the Led Indicator starts flashing. Count the number of Flashes in each of the 3 digit code.

- Sum of short flashes indicate the number in that digit.

- Zero is indicated by a long single flash.

- Between digits there will be a pause of 2 seconds.

EXAMPLE : CODE = 107

1 WIE PROGRAMMIEREN SIE DIE UNIVERSAL FERNBEDIENUNG FÜR IHRE GERÄTE?

SUCHEN SIE IHREN GERÄTE - CODE AUS DER CODE - LISTE HERAUS UND GEBEN SIE DIESEN CODE FÜR EINEN DER FÜNF (3 FÜR MULTITEL) GERÄTEPLATZE EIN. (Z.B. TV, VCR, SAT, ...)

BENUTZEN SIE DEN AUTOMATISCHEN SUCHLAUF.

SO GEBEN SIE EINEN GERÄTE - CODE IN EINEN DER FÜNF (3 FÜR MULTITEL) GERÄTEPLATZE

1- Suchen Sie den ersten Code für Ihr Gerät aus der Herstellerliste heraus. Diese finden Sie am Ende der Bedienungsanleitung.

z.B. Philips TV →  → Universal Fernbedienungs Code : 102

2- Durch Benutzen der "PROGRAMM - PLATZ - WAHL" Taste ③ "DEVICE SELECT" wählen Sie den Bedienplatz worauf Sie Ihr Gerät speichern wollen. (z.B. TV, VCR, SAT, ...) Die Led-Leuchten zeigen an, welches Gerät ausgewählt wurde.

3- Drücken Sie die Taste "CODE" ④

4- Geben Sie den 3 stelligen Code für das Gerät (wie in Punkt 1 ermittelt) ein.

Benützen Sie die Zahlen-Tasten. ⑤

* Einige Hersteller haben mehr als einen Code angegeben. Wenn der erste Code nicht korrekt funktioniert, versuchen Sie den nächsten, bis sich Ihr Gerät fernbedienen lässt.

* Wenn keiner der gelisteten Codes funktioniert probieren Sie es mit dem **AUTOMATISCHEN SUCHLAUF**, wie in 1B beschrieben.

* Wenn ein korrekter Code eingegeben wurde, blinkt die Leuchtdiode 4 mal schnell hintereinander.

* Wenn ein nicht korrekter Code eingegeben wurde, geht die Leuchtdiode ① **SOFORT** aus.

Die Leuchtdiode bleibt solange aus, bis Sie die "CODE" - Taste erneut drücken und einen korrekten Code eingeben.

Ein "nicht korrekter" Code heißt, daß ein Code eingegeben wurde, der nicht in der Code-Liste steht oder daß während der Code - Eingabe eine andere als die Zahlen-Tasten betätigt wurde.

* Der Vorgang wird abgebrochen:

Wenn nach der Durchführung der Schritte 2 und 3 mehr als 10 Sekunden vergehen bis Schritt 4 eingeleitet wird.

Wenn nach der Durchführung der Schritte 2 und 3 eine andere als die Zahlen-Tasten betätigt wird.